

OVATION

R Ê V E E-3 IP

User Manual



Model ID: OVATIONREVEE3IP

Edition Notes

The Ovation Rêve E-3 IP User Manual includes a description, safety precautions, installation, programming, operation, and maintenance instructions for the Ovation Rêve E-3 IP.

Trademarks

Chauvet, Chauvet Professional, the Chauvet logo, and Ovation are registered trademarks or trademarks of Chauvet & Sons, LLC (d/b/a Chauvet and Chauvet Lighting) in the United States and other countries. Other company and product names and logos referred to herein may be trademarks of their respective companies.

Copyright Notice

The works of authorship contained in this manual, including, but not limited to, all designs, text, and images are owned by Chauvet.

© Copyright 2024 Chauvet & Sons, LLC. All rights reserved.

Electronically published by Chauvet in the United States of America.

Manual Use

Chauvet authorizes its customers to download and print this manual for professional information purposes only. Chauvet expressly prohibits the usage, copy, storage, distribution, modification, or printing of this manual or its content for any other purpose without written consent from Chauvet.

Document Printing

For best results, print this document in color, on letter size paper (8.5 x 11 in), double-sided. If using A4 paper (210 x 297 mm), configure the printer to scale the content accordingly.

Intended Audience

Any person installing, operating, and/or maintaining this product should completely read through the guide that shipped with the product, as well as this manual, before installing, operating, or maintaining this product.

Disclaimer

Chauvet believes that the information contained in this manual is accurate in all respects. However, Chauvet assumes no responsibility and specifically disclaims any and all liability to any party for any loss, damage or disruption caused by any errors or omissions in this document, whether such errors or omissions result from negligence, accident or any other cause. Chauvet reserves the right to revise the content of this document without any obligation to notify any person or company of such revision, however, Chauvet has no obligation to make, and does not commit to make, any such revisions.

Document Revision

Go to www.chauvetprofessional.com for the latest version.

| Revision | Date | Description |
|----------|---------|--|
| 8 | 08/2024 | Updated information about soft-focus filter; added Error Codes and Acoustic info |

TABLE OF CONTENTS

- 1. Before You Begin** 1
 - What Is Included 1
 - Claims 1
 - Manual Conventions 1
 - Symbols 1
 - Safety Notes..... 2
 - FCC Statement of Compliance 3
 - RF Exposure Warning for North America and Australia..... 3
 - Expected LED Lifespan..... 3
- 2. Introduction** 4
 - Description 4
 - Features 4
 - Product Overview 5
 - Product Dimensions 6
- 3. Setup** 7
 - AC Power 7
 - AC Plug 7
 - Power Linking..... 7
 - DMX Linking..... 8
 - DMX Personalities..... 8
 - Remote Device Management..... 8
 - Master/Slave Connectivity..... 8
 - USB Software Update 9
 - Force Upload..... 9
 - Mounting 10
 - Orientation..... 10
 - Rigging 10
 - Procedure..... 10
 - Adjustable Yoke 11
 - Soft Focus Filter 12
 - Lens Tubes 12
- 4. Operation** 13
 - Control Panel Operation..... 13
 - Control Options 13
 - Programming..... 13
 - DMX Configuration..... 13
 - DMX Personalities..... 13
 - Starting Address..... 13
 - Menu Map 14
 - Virtual Color Wheel 17
 - Virtual Color Wheel Chart 17
 - Color Temperature Chart 18
 - Color Temperature DMX Chart 18
 - DMX Values 19
 - 18Ch / 14Ch1 / 14Ch2 / 12Ch..... 19
 - 8Ch / 6Ch / 5Ch / 1Ch..... 20
 - HSV..... 20

| | |
|--|-----------|
| Standalone Configuration..... | 21 |
| Virtual Color Wheel | 21 |
| Color Temperature | 21 |
| Manual Color Mixer | 21 |
| Color X-Fade Speed | 21 |
| Auto Programs | 21 |
| Red Shift | 21 |
| Master/Slave | 21 |
| Dimmer Curve | 22 |
| Dimmer Profiles..... | 22 |
| Color Calibration | 22 |
| LED Frequency | 22 |
| Fan Mode | 22 |
| Back Light | 22 |
| Key Lock | 22 |
| System Information | 22 |
| Error Codes..... | 23 |
| 5. Technical Information | 24 |
| Product Maintenance | 24 |
| Torque Measurements | 24 |
| Vacuum Test Measurements | 24 |
| 6. Technical Specifications | 25 |
| Contact Us | 27 |
| Warranty & Returns..... | 27 |

Before You Begin

1. Before You Begin

What Is Included

- Ovation Rêve E-3 IP
- Seetronic Powerkon IP65 power cable
- Ovation metal gobo holder
- Soft-focus filter
- Quick Reference Guide

Claims

Carefully unpack the product immediately and check the container to make sure all the parts are in the package and are in good condition.








If the box or the contents (the product and included accessories) appear damaged from shipping, or show signs of mishandling, notify the carrier immediately, not Chauvet. Failure to report damage to the carrier immediately may invalidate a claim. In addition, keep the box and contents for inspection.

For other issues, such as missing components or parts, damage not related to shipping, or concealed damage, file a claim with Chauvet within 7 days of delivery.

Manual Conventions

| Convention | Meaning |
|------------|---|
| 1–512 | A range of values |
| 50/60 | A set of values of which only one can be chosen |
| <SET> | A button on the product's control panel |
| Settings | A product function or a menu option |

Symbols

| Symbol | Meaning |
|---|---|
|  | Electrical warning. Not following these instructions may cause electrical damage to the product, accessories, or the user. |
|  | Critical installation, configuration, or operation information. Not following these instructions may make the product not work, cause damage to the product, or cause harm to the operator. |
|  | Pinch point warning. Not following these instructions may result in damage to, or loss of, tools, digits, or limbs. |
|  | Important installation or configuration information. The product may not function correctly if this information is not used. |
|  | Useful information. |
|  | <p>Any reference to data or power connections in this manual assumes the use of Seetronic IP-rated cables.</p> |
|  | <p>The term “DMX” used throughout this manual refers to the USITT DMX512-A digital data transmission protocol.</p> <p>Connection of the control signal: DMX line</p> <ul style="list-style-type: none"> • The product has XLR sockets for DMX input and output. • Notice: This control circuit is isolated and belongs to the Class 2 data port. <p>The control circuit has a cumulative leakage current of less than 3.5 mA.</p> |

Safety Notes

Read all the following safety notes before working with this product. These notes contain important information about the installation, usage, and maintenance of this product.



This product contains no user-serviceable parts. Any reference to servicing in this User Manual will only apply to properly trained, certified technicians. Do not open the housing or attempt any repairs.



All applicable local codes and regulations apply to proper installation of this product.

- The luminaire is intended for professional use only.
- The luminaire should be positioned so that prolonged staring into the luminaire at a distance closer than 21.7 ft (6.6 m) is not expected.
- If the external flexible cable or cord of this luminaire is damaged, it shall be replaced by a special cord or cord exclusively available from the manufacturer or its service agent.
- The light source contained in this luminaire shall only be replaced by the manufacturer or its service agent or a similar qualified person.
- **CAUTION:**
 - This product's housing may be hot when operating. Mount this product in a location with adequate ventilation, at least 20 in (50 cm) from adjacent surfaces.
 - When transferring the product from extreme temperature environments, (e.g., cold truck to warm humid ballroom) condensation may form on the internal electronics of the product. To avoid causing a failure, allow the product to fully acclimate to the surrounding environment before connecting it to power.
 - Flashing light is known to trigger epileptic seizures. User must comply with local laws regarding notification of strobe use.
- **ALWAYS:**
 - Disconnect from power before cleaning the product or replacing the fuse.
 - When using an IP65-rated product in an outdoor environment, use IP65- (or higher) rated power and data cable.
 - Replace and secure IP-rated protective covers to all power, data, USB, or other ports when not in use.
 - Replace the fuse with the same type and rating.
 - Use a safety cable when mounting this product overhead.
 - Connect this product to a grounded and protected circuit.
- **DO NOT:**
 - Open this product. It contains no user-serviceable parts.
 - Look at the light source when the product is on.
 - Leave any flammable material within 50 cm of this product while operating or connected to power.
 - Connect this product to a dimmer or rheostat.
 - Operate this product if the housing, lenses, or cables appear damaged.
 - Submerge this product (adhere to standards for the published IP rating). Regular outdoor operation is fine.
 - Permanently install outdoors in locations with extreme environmental conditions. This includes, but is not limited to:
 - Exposure to a marine/saline environment (within 3 miles of a saltwater body of water).
 - Locations where normal temperatures exceed the temperature ranges in this manual.
 - Locations that are prone to flooding or being buried in snow.
 - Other areas where the product will be subject to extreme radiation or caustic substances.
- **ONLY** use the handles or the hanging/mounting brackets to carry this product.
- The maximum ambient temperature is 113 °F (45 °C). Do not operate this product at higher temperatures.
- The minimum startup temperature is -4°F (-20°C). Do not start the product at lower temperatures.
- The minimum ambient temperature is -22°F (-30°C). Do not operate the product at lower temperatures.
- To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.
- In the event of a serious operating problem, stop using immediately.



If a Chauvet product requires service, contact Chauvet Technical Support.

Before You Begin

FCC Statement of Compliance

This device complies with Part 15 Part B of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Warning for North America and Australia

Warning! This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and the user. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Expected LED Lifespan

Over time, use and heat will gradually reduce LED brightness. Clustered LEDs produce more heat than single LEDs, contributing to shorter lifespans if always used at full intensity. The average LED lifespan is 40,000 to 50,000 hours. To extend LED lifespan, maintain proper ventilation around the product, and limit the overall intensity.

2. Introduction


Description

Ovation Rêve E-3 IP is an outdoor-ready, LED Ellipsoidal Reflector Spotlight (ERS)-style lighting fixture that is virtually silent and IP65 rated. It's perfect for studio, theatre, and film applications—both indoors and out. It has the brightest light engine that can produce full-spectrum colors and tunable whites. Ovation Rêve E-3 IP features adjustable PWM, +/- green adjustment and emulated red-shift, and ultra-smooth 16-bit dimming curves and speeds to complement any lighting scheme, anywhere.

Features




- Full-spectrum, high-power LED ERS-style lighting fixture for theatre, film, and production
- Fully IP65-rated for seasonal use indoors or out
- Linear color temperature presets from 2800K to 8000K with high Color Rendering Index (CRI) and Color Quality Scale (CQS)
- Virtual color wheel with color matched to popular gel colors
- +/- Green adjustment and emulated red shift via DMX or on-board control
- Remote Device Management (RDM) for added flexibility
- Adjustable Pulse Width Modulation (PWM) to avoid flickering on camera
- Virtually silent operation for use in studio, film, and theatre applications
- Ultra-smooth 18-bit dimming curves and speeds to complement any lighting scheme
- Innovative adjustable yoke for mounting in low-clearance areas
- Direct power/data connection and control options for the Ovation GR-1 gobo rotator
- USB port for fixture software updates

Product Overview

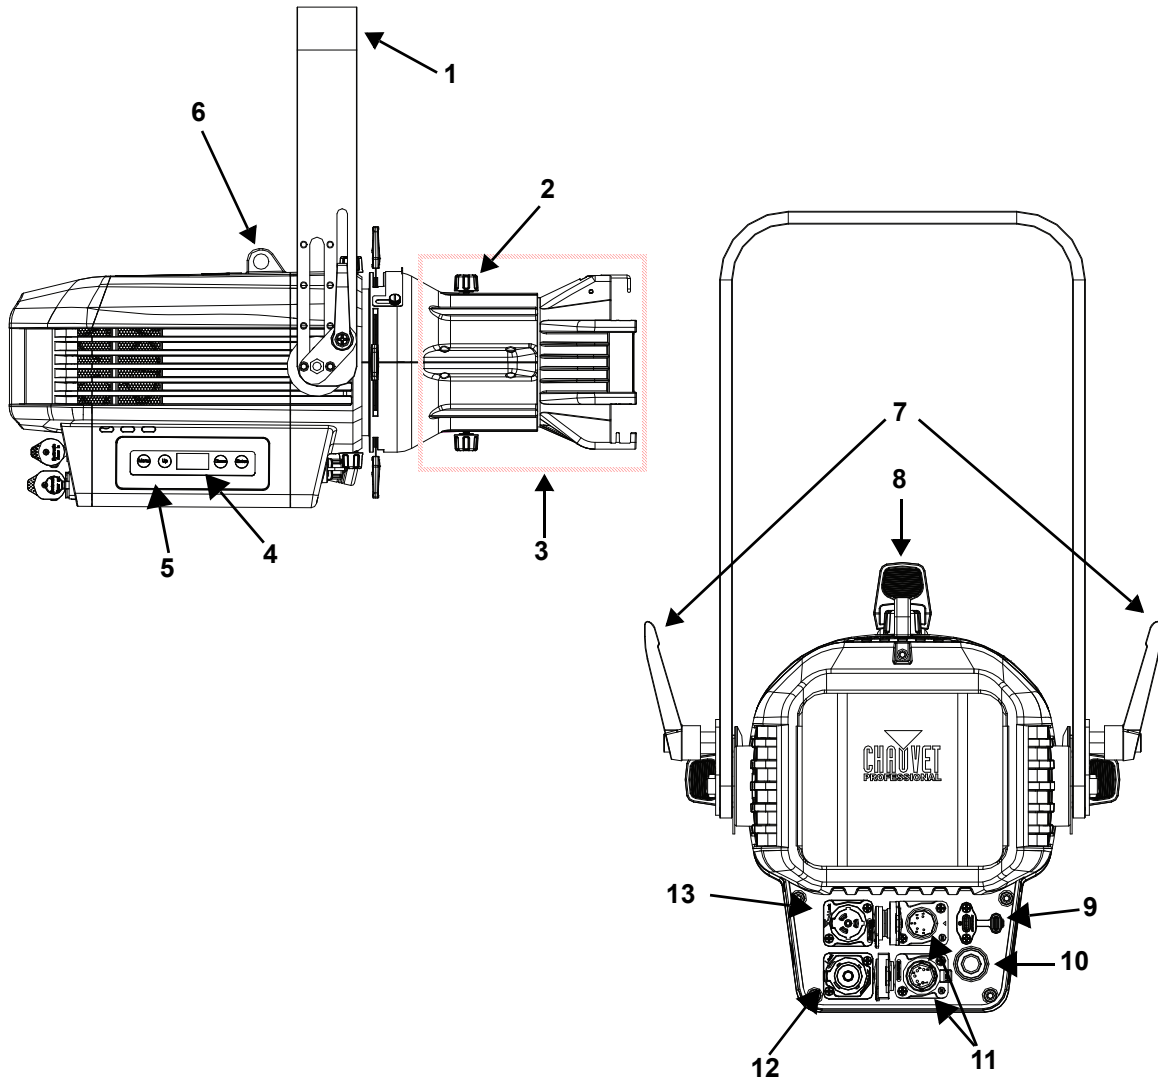

| # | Name | # | Name |
|---|-------------------------------|----|-----------------------|
| 1 | Handle/Mounting bracket | 8 | Framing shutters (4x) |
| 2 | Beam focus knob (2x) | 9 | USB port |
| 3 | Lens tube (sold separately) | 10 | Focus mode buttons |
| 4 | Display | 11 | 5-pin DMX in/out |
| 5 | Menu buttons | 12 | Power out |
| 6 | Safety loop | 13 | Power in |
| 7 | Bracket adjustment knobs (2x) | | |

Product Dimensions

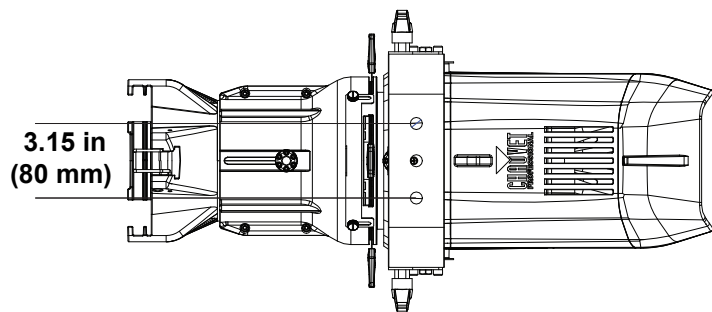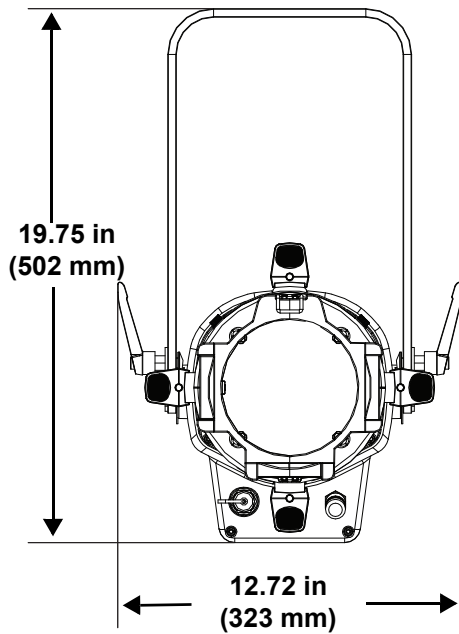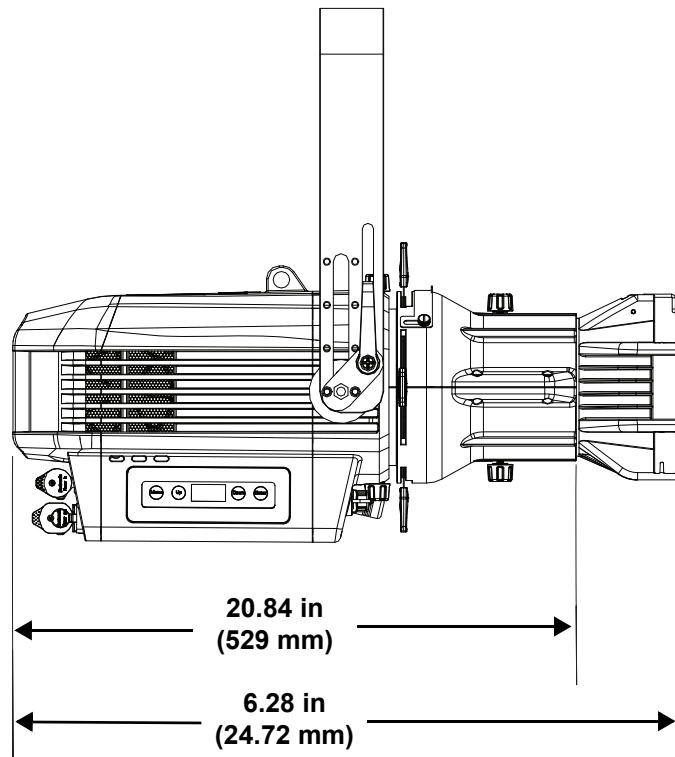

3. Setup

AC Power

Each Ovation Rêve E-3 IP has an auto-ranging power supply that works with an input voltage range of 100 to 240 V~, 50/60 Hz. To determine the power requirements for each Ovation Rêve E-3 IP, refer to the label affixed to the product or to the [Technical Specifications](#) chart in this manual.

The listed current rating indicates the maximum current draw during normal operation. For more information, download Sizing Circuit Breakers from the Chauvet website: www.chauvetprofessional.com.



- **Always connect the product to a protected circuit (a circuit breaker or fuse). Make sure the product has an appropriate electrical ground to avoid the risk of electrocution or fire.**
- **To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.**



Never connect the product to a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel serves only as a 0 to 100% switch.

AC Plug

The Ovation Rêve E-3 IP comes with a power input cord terminated with a Seetronic Powerkon IP65 connector on one end and an Edison plug on the other end (U.S. market). If the power input cord that came with the product has no plug, or if the plug needs to be changed, use the table below to wire the new plug.

| Connection | Wire (U.S.) | Wire (Europe) | Screw Color |
|------------|--------------|---------------|-----------------|
| AC Live | Black | Brown | Yellow or Brass |
| AC Neutral | White | Blue | Silver |
| AC Ground | Green/Yellow | Green/Yellow | Green |

Power Linking

It is possible to power link Ovation Rêve E-3 IP products. See the table below for the current draw at each voltage and frequency:

| | 100 V, 60 Hz | 120 V, 60 Hz | 208 V, 60 Hz | 230 V, 50 Hz | 240 V, 60 Hz |
|---------------------|--------------|--------------|--------------|--------------|--------------|
| Current Draw | 3.67 A | 2.99 A | 1.70 A | 1.56 A | 1.48 A |

Never exceed 12A on a single circuit. Power-linking cables can be purchased separately.

DMX Linking

The Ovation Rêve E-3 IP can be linked to a DMX controller using a 5-pin DMX connection. If using other DMX-compatible products with this product, it is possible to control each individually with a single DMX controller.

DMX Personalities

The Ovation Rêve E-3 IP uses a 5-pin DMX data connection for the **1Ch, 5Ch, 6Ch, 8Ch, 12Ch, 14Ch1, 14Ch2, 18Ch**, and **HSV** DMX personalities.

- Refer to the [Introduction](#) for a brief description of each DMX personality.
- Refer to the [Operation](#) chapter to learn how to configure the Ovation Rêve E-3 IP to work in these personalities.
- The [DMX Values](#) section provides detailed information regarding the DMX personalities.



For information about DMX standards, Master/Slave connectivity, or the DMX cables needed to link this product to a DMX controller, download the DMX Primer from the Chauvet website: www.chauvetprofessional.com.

Remote Device Management

Remote Device Management (RDM) is a standard for allowing DMX-enabled devices to communicate bi-directionally along existing DMX cabling. Check with the manufacturer or the DMX controller's User Manual, as not all DMX controllers have this capability. The Ovation Rêve E-3 IP supports RDM protocol that allows feedback to make changes to menu map options.

Master/Slave Connectivity

The Master/Slave mode allows an Ovation Rêve E-3 IP (the master) to control one or more Ovation Rêve E-3 IP products (the slaves) without a DMX controller. Once Ovation Rêve E-3 IP becomes the master when running an auto or custom program, or in Static mode.

Each slave's control panel must be configured to operate in Slave mode. During Master/Slave operation, the slaves will operate in unison with the master.



DO NOT connect a DMX controller to products operating in Master/Slave mode. The DMX controller signals may interfere with the signals from the master.



- The [Operation](#) section of this manual provides detailed instructions on how to configure the master and slaves.
- For more information about DMX standards or the DMX cables needed to link this product to a DMX controller, download the DMX primer from the Chauvet website: www.chauvetprofessional.com.

USB Software Update

The Ovation Rêve E-3 IP allows for software updates with a USB device using the built-in USB port. To update the software using a USB flash drive, do the following:

1. Power on the product, and plug the flash drive into the USB port.
2. Once the flash drive has been detected, the message “**Upgrade Firmware**” will be displayed. Press <ENTER>. If a different message appears on the display, search for the updated software in the main menu (**Update Firmware**) and select from **Only This Unit**, **Multiple Fixture**, or **Other Fixture Type**. A list of the updated software files will be displayed.
3. Select the file that needs to be uploaded. The message “**Are you sure?**” will be displayed. Press <ENTER>.



If the selected file is incorrect, the upgrade will fail, and the display will go back to the main interface. Repeat steps 1–3 using the correct file.

4. If the selected file is correct, the upgrade will start. **DO NOT** turn off the power or disconnect the USB during the process. USB update can take several minutes to complete.
5. When the update is completed, the fixture will automatically reboot.
6. Go to Fixture Information on the product’s menu map and confirm the firmware revision.
7. When the boot-up process is finished, restart the product.



- Place the .chl file in the root directory of the USB drive.
- The product’s USB port supports up to 32GB capacity and only works with FAT32 file format.



The “Other Fixture Type” option can only be selected for connected products compatible with the Upload 03 (the first 2 digits of the item code must be 03).



Turning off the power, removing the USB, or not setting the fixture to the correct protocol during the update can cause partial or total firmware failure in the targeted fixture(s). Please refer to [Force Upload](#) section to fix firmware failure issues.

Force Upload

A Force Upload is done whenever a software update fails due to accidental removal of the USB flash drive, incorrect control protocol, or loss of power during a regular software update process.



- A Force Upload process requires a target fixture (the fixture that needs a Force Upload and a main fixture (the fixture that controls the upload process).
- The Force Upload process can only be done one target fixture at a time.

To do a Force Upload, follow the instructions below:

1. Link the target fixture to the main fixture via a DMX 5-pin connection. Ensure that the target fixture is turned off.
2. Turn on the main fixture and set its protocol to **DMX512**.
3. Plug the flash drive into the USB-C port of the main fixture.
4. Go to Upgrade Firmware on the menu map.
5. Choose between **Multiple Fixture** and **Other Fixture Type**. Press <ENTER>.
 - **Multiple Fixture:** Both the target fixture and main fixture are from the same product line (e.g., 2 Ovation Rêve E-3 IP fixtures).
 - **Other Fixture Type:** The target fixture and main fixture are from different product series (e.g., a Ovation Rêve E-3 IP as the target fixture and a Maverick Silens 2 Profile as the main fixture).
6. Select the file that needs to be uploaded. The message “**Are you sure?**” will appear on the screen. Press <ENTER>. Turn on the target fixture within 1–2 seconds of pressing <ENTER>. The display on the target fixture should remain off.
 - a. The main fixture will show the update progress (0–100%).
 - b. The target fixture’s display will turn on, and a notification “<UPDATE>” will appear on the screen.



The timing of when the target fixture’s display will turn on varies from fixture to fixture.

7. **DO NOT** turn off power or remove the USB flash drive. Once the software is done uploading, the target fixture will automatically reboot.
8. Go to the target fixture’s main menu and confirm that the firmware version has been updated.
9. Reboot the target fixture.

Mounting

Before mounting the product, read and follow the safety recommendations indicated in the [Safety Notes](#). For the Chauvet Professional line of mounting clamps, go to: <http://trusst.com/products/>.

Orientation

Always mount this product in a safe position, ensuring that there is adequate room for ventilation, configuration, and maintenance.

Rigging


Chauvet recommends using the following general guidelines when mounting this product:

- Before deciding on a location for the product, always make sure there is easy access to the product for maintenance and programming.
- Make sure that the structure and attachment points can support the weight before hanging the product (see the [Technical Specifications](#) section for the weight information).
- When mounting the product overhead, always use a safety cable. Mount the product securely to a rigging point, whether an elevated platform or a truss.
- When rigging the product onto a truss, use a mounting clamp of appropriate weight capacity.
- When power linking multiple products, mount the products close enough for power-linking cables to reach.
- The bracket adjustment knobs allow for directional adjustment when aiming the product to the desired angle. Only loosen or tighten the bracket knobs manually. Using tools could damage the knobs.

Procedure

The Ovation Rêve E-3 IP comes with a double-bracketed yoke that can be used as a floor stand or to which mounting clamps can be attached for hanging. Mounting clamps must be purchased separately. Ensure that the clamps can support the weight of this product. Use at least one mounting point per product where necessary.

Mounting Diagram

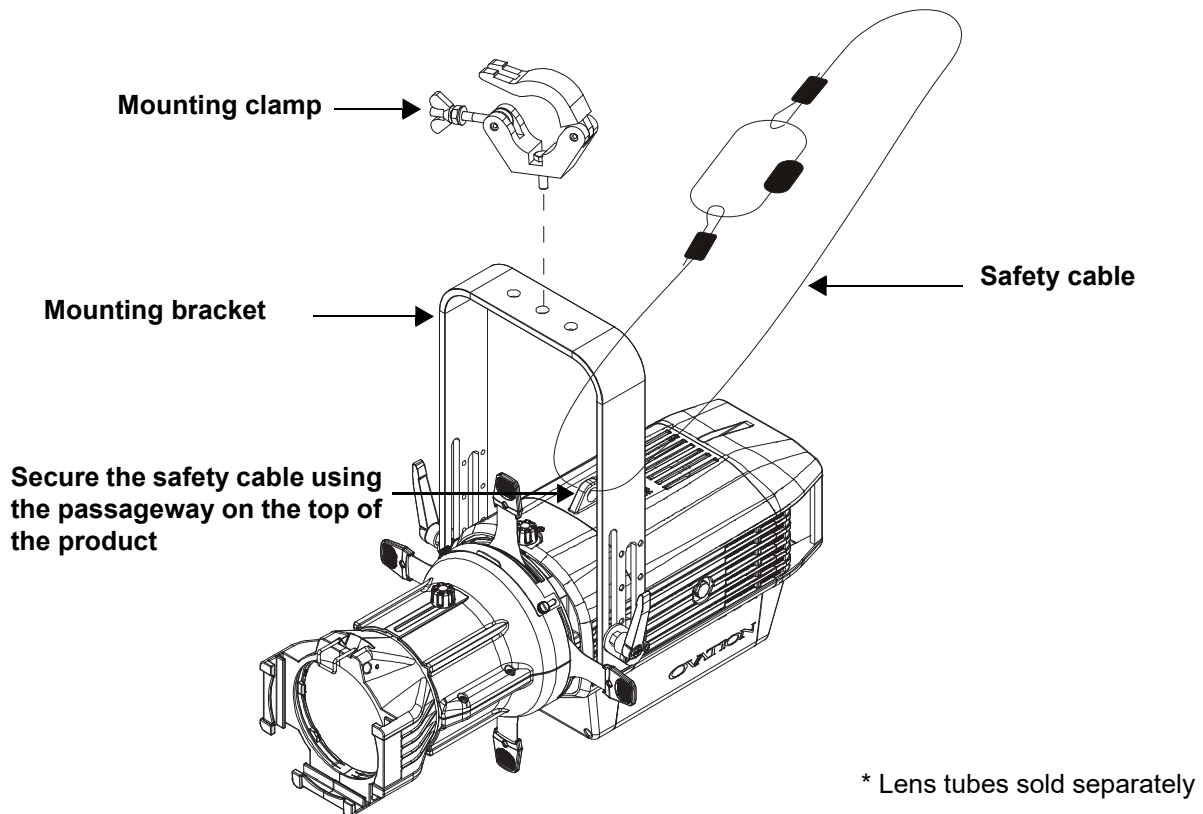


Overhead Mounting

Adjustable Yoke

The Ovation Rêve E-3 IP comes with an adjustable yoke for mounting in low-clearance areas. To modify the height of the yoke, do the following:


1. Loosen the bracket adjustment knobs on both sides of the fixture.
2. On each side of the fixture, remove the two screws and loosen the bolt attaching the plate to the mounting bracket.
3. Using the screw holes as guide, adjust the position of the mounting bracket to achieve the desired height of the yoke.
4. Put the screws back in place, and tighten the bolts and the bracket adjustment knobs.

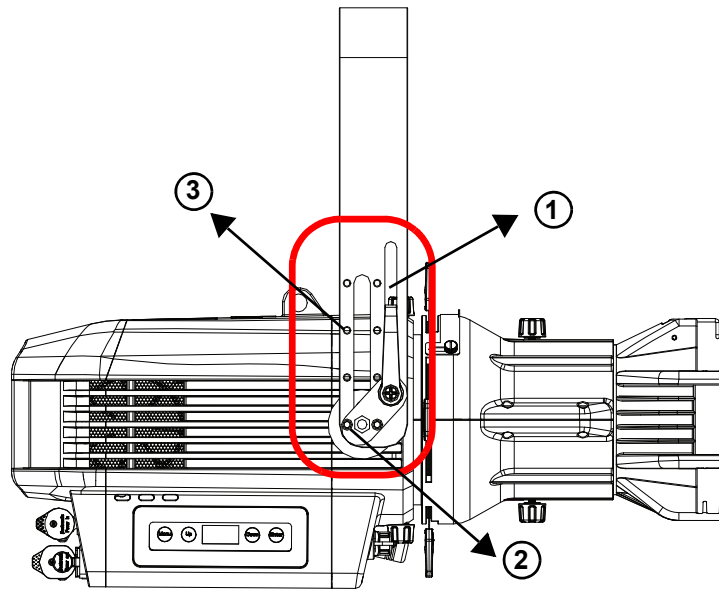

Soft Focus Filter

The Ovation Rêve E-3 IP comes with a soft-focus filter included in the box.

- To install the soft-focus filter into the fixture, gently squeeze the filter and carefully slide it under the filter holders. Make sure to follow the orientation direction printed on the filter.
- To remove the soft-focus filter, gently squeeze and slide the filter out from under the four filter holders

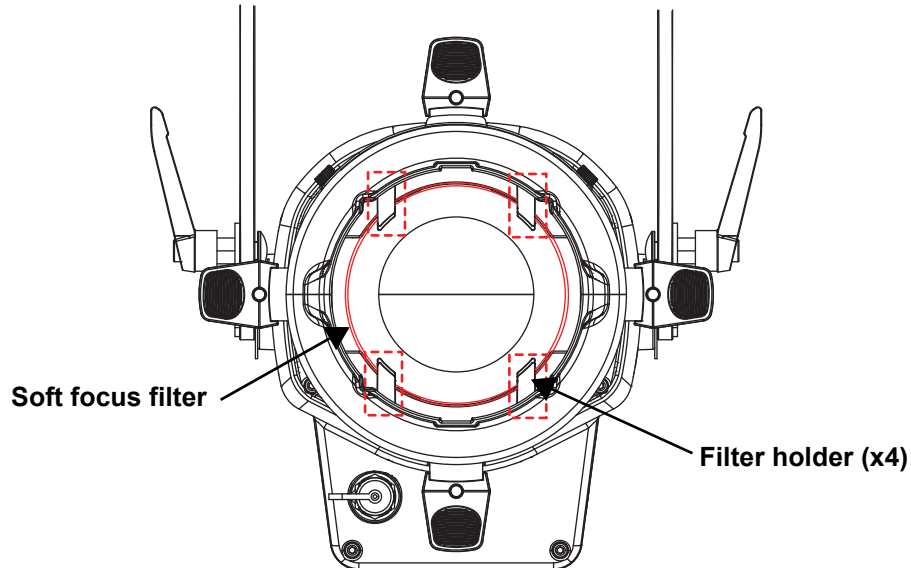

To keep the soft focus filter in good condition:

- Ensure that no fingerprints are left on the filter, as this may cause the filter to heat unevenly and eventually warp.
- When inserting shutter blades into the light path, note that the heat is reflected back at the filter. The deeper the blades are inserted, and the longer the fixture runs, the more heat gets reflected on to the filter, causing it to warp and potentially adhere to the shutter blades.



- **If there is a protective film on the soft focus filter, it must be removed before use.**
- **The standard filter frame must be used together with the fixture.**



- **The lifespan and effectiveness of the Soft Focus Filter accessory included with this product will be negatively impacted by excessive reflected heat caused by the extended use of gobos, shutters, irises, and other beam-shaping accessories. The filter is not covered by the limited warranty. Replacements are available for purchase.**
- **Do not use the soft-focus filter with gobos or large shutter cuts. Doing so will cause excessive heat reflection onto the filter, causing it to melt and warp. This filter is intended to eliminate LED imaging (skittles) when directly viewing the lens.**

Lens Tubes

The following lens tubes are available for purchase:

- 19°, 26°, 36°, and 50° with gel frame (6.25 in/159 mm accessories)
- 5° gel frame (14 in/356 mm)
- 10° gel frame (12 in/304 mm)
- 14°, 15–30° and 25°–50° zoom gel frame (7.5 in/191 mm accessories)

4. Operation

Control Panel Operation

| Button | Function |
|---------|--|
| <MENU> | Exits from the current menu or function |
| <ENTER> | Enables the currently displayed menu or sets the currently selected value in to the current function |
| <UP> | Navigates upward through the menu list or increases the numeric value when in a function |
| <DOWN> | Navigates downward through the menu list or decreases the numeric value when in a function |

Control Options

Set the Ovation Rêve E-3 IP starting address in the 001-512 DMX range. This enables control of up to 8 products in the 18-channel personality.

Programming

Refer to the [Menu Map](#) to understand the menu options. The menu map shows the main level and a variable number of programming levels for each option.

- To go to the desired main level, press <MENU> repeatedly until the option shows on the display. Press <ENTER> to select. This will show the first programming level for that option.
- To select an option or value within the current programming level, press <UP> or <DOWN> until the option shows on the display. Press <ENTER> to select. This will show either the first option if there is another programming level, or the selected value.
- Press <MENU> repeatedly to exit to the previous main level.

DMX Configuration

Use DMX configurations to operate the product with a DMX controller.

DMX Personalities

This setting allows the user to choose a particular DMX personality.

1. Go to the **DMX Channel** main level.
2. Select the desired personality (**1Ch, 5Ch, 6Ch, 8Ch, 12Ch, 14Ch1, 14Ch2, 18Ch, and HSV**).



- See the [Starting Address](#) section for the highest starting address suggested for each personality.
- Make sure that the starting addresses on the various products do not overlap due to the new personality setting.

Starting Address

In this mode, each product will respond to a unique starting address from the DMX controller. All products with the same starting address will respond in unison.

1. Go to the **DMX Address** main level.
2. Set the starting address (**001–512**).

The highest recommended starting address for each DMX mode is as follows:

| DMX Personality | DMX Address | DMX Personality | DMX Address |
|-----------------|-------------|-----------------|-------------|
| HSV | 509 | 8Ch | 505 |
| 1Ch | 512 | 12Ch | 501 |
| 5Ch | 508 | 14Ch | 499 |
| 6Ch | 507 | 18Ch | 495 |

Menu Map

Refer to the Ovation Rêve E-3 IP product page on www.chauvetprofessional.com for the latest menu map.

| Main Level | Programming Levels | | Description | |
|----------------------------|----------------------------|--|--|---|
| DMX Address | 001–512* | | Selects DMX address (*highest channel restricted to personality chosen) | |
| DMX Channel | 1Ch | Virtual Color Wheel | 1-channel: dimmer | |
| | | Color Temperature | | |
| | | Manual Color Mixer | | |
| | | 5Ch | 5-channel: dimmer, virtual color wheel (VCW), color temperature, hue, gobo rotator | |
| | | 6Ch | 6-channel: red, green, blue, amber, mint, gobo rotator | |
| | | 8Ch | 8-channel: dimmer, RGBAM, strobe, gobo rotator | |
| | | 12Ch | 12-channel: 16-bit dimmer, RGBAM, strobe, VCW, color temperature, hue, gobo rotator | |
| | | 14Ch1 | 14-channel: dimmer, RGBAM, strobe, VCW, color temperature, hue, auto programs, auto speed, control, gobo rotator | |
| | | 14Ch2 | 14-channel: 16-bit dimmer, 16-bit RGBAM, strobe, gobo rotator | |
| | 18Ch | 18-channel: 16-bit RGBAM and dimmer, strobe, VCW, color temperature, hue, control, gobo rotator | | |
| | HSV | 4-channel: hue, saturation, value, gobo rotator | | |
| Virtual Color Wheel | Virtual Color Wheel | C3050 - Md Yellow C3040 - Lt Yellow C3240 - Amb Yellow C2340 - V Lt Amber C2040 - Lt Amber C2050 - Md Amber C2060 - Dk Amber C1050 - Lt Red C1080 - Md Red C1020 - NC Pink C1030 - Md Pink C1630 - Dk Pink C1250 - Md Red Amber C1060 - Dk Red Amber C1650 - Magenta C6170 - Dk Magenta C6020 - Lt Lavender C5030 - Lt Blue C5020 - V Lt Blue C5430 - Lt Blue 2 C5070 - Blue C5050 - Md Blue C5060 - Dk Blue C5690 - Indigo C5080 - V Dk Blue C5081 - V Dk Blue 2 C4370 - Yel Green C4070 - Green C4550 - Turquoise C4560 - Aqua C4570 - Blue Green | Dimmer 000–255 | Virtual Color Wheel simulates the output of each gel color. Refer to the Virtual Color Wheel Chart for specific values. |

| Main Level | Programming Levels | | | Description | |
|---------------------|---------------------------------------|---------|---|-------------|---|
| Virtual Color Wheel | Color Temperature | 2800K | Dimmer | 0–255 | Preset white color temperatures. Emulates a tungsten lamp at the specified color temperature. Refer to the Color Temperature Chart for specific values. |
| | | 2900K | | | |
| | | 3000K | | | |
| | | 3100K | | | |
| | | 3200K | | | |
| | | 3300K | | | |
| | | 3400K | | | |
| | | 3500K | | | |
| | | 3600K | | | |
| | | 3700K | | | |
| 3800K | Hue | -25–25 | | | |
| 3900K | | | | | |
| 4000K | | | | | |
| 4100K | | | | | |
| 4200K | | | | | |
| 4300K | | | | | |
| 4400K | | | | | |
| 4500K | | | | | |
| 4600K | | | | | |
| 4700K | | | | | |
| 4800K | | | | | |
| 4900K | | | | | |
| 5000K | | | | | |
| 5100K | | | | | |
| 5200K | | | | | |
| 5300K | | | | | |
| 5400K | | | | | |
| 5500K | | | | | |
| 5600K | | | | | |
| 5700K | | | | | |
| 6000K | | | | | |
| 6500K | | | | | |
| 7000K | | | | | |
| 7500K | | | | | |
| 8000K | | | | | |
| Manual Color Mixer | Red Green Blue Amber Mint | 000–255 | Combines red, green, blue, amber, and mint to make a custom color (0–100%) | | |
| Color X-Fade Speed | Off | | Turns off the fade transition between colors | | |
| | X-Fade Speed 1 | | Creates fade transition between colors when using colors in the Virtual Color Wheel or Color Temperature chart, from fast (X-Fade Speed 1) to slow (X-Fade Speed 4) | | |
| | X-Fade Speed 2 | | | | |
| | X-Fade Speed 3 | | | | |
| X-Fade Speed 4 | | | | | |
| Auto Show | Auto 1–5 | 1–100 | Selects automatic programs and auto program speed | | |
| Red Shift | On | | Mimics halogen lamp dimming | | |
| | Off | | | | |
| Gobo Rotator | 000–255 | | Controls the gobo rotator | | |
| Master/Slave | Master | | Receives DMX signal from the DMX controller (master) | | |
| | Slave | | Receives DMX signal from the master unit | | |

| Main Level | Programming Levels | | Description | |
|--------------------|--|---|--|-------------------------------|
| Dimmer Curve | S Curve | | Sets the dimmer curve | |
| | Linear | | | |
| Dimmer Mode | Square | | Linear dimmer | |
| | Inverse Square | | | |
| Color Calibration | User Calibration | Off | Dimming curves, from fast (Dimmer 1) to slow (Dimmer 3) | |
| | | Red | 125–255 | Deactivates color calibration |
| | | Green | | Sets red LED maximum value |
| | | Blue | | Sets green LED maximum value |
| | | Amber | | Sets blue LED maximum value |
| | | Mint | | Sets amber LED maximum value |
| | Factory Calibration | Sets mint LED maximum value | | |
| LED Frequency | 600Hz 1200Hz 2000Hz 4000Hz 6000Hz 25KHz | | Sets the PWM output frequency | |
| Fan Mode | Auto | | Sets the fan to auto mode | |
| | On | | Sets the fan to always on | |
| | Off | | Sets the fan to always off | |
| | Silent | | Sets the fan to silent | |
| Back Light | 10S | | Turns off display backlight after 10 seconds of inactivity | |
| | 30S | | Turns off display backlight after 30 seconds of inactivity | |
| | 2Min | | Turns off display backlight after 2 minutes of inactivity | |
| | Always On | | Display backlight always on | |
| Key Lock | On | | Enables/disables display lock (Password <UP>, <DOWN>, <UP>, <DOWN>, <ENTER>) | |
| | Off | | | |
| Gobo Power | On | | Enables/disables gobo power output | |
| | | Off | | |
| Information | Fixture Hours | ----_H | Shows total hours the product has been powered on | |
| | LED Hours | ----_H | Shows total hours the LED has been powered on | |
| | Version | V_._ | Shows current firmware version | |
| | UID | ----- | Shows product UID | |
| Update Firmware | Only This Unit | -----_CHL | Selects an update file for this product, or shows “No such file!” | |
| | | ... | | |
| | Multiple Units | -----_CHL | Selects an update file for this and connected Ovation Rêve E-3 IP products, or shows “No such file!” | |
| | | ... | | |
| Other Fixture Type | -----_CHL | Selects an update file for other connected products, or shows “No such file!” | | |
| | ... | | | |
| Factory Reset | No | | Resets settings to factory default | |
| | Yes | | | |



WARNING: When operating in Fan Mode: Off and Fan Mode: Silent, the fixture will become hotter to the touch than when using other fan modes. Use proper protective equipment to prevent burns. Keep a safe distance from flammable objects.



NOTICE: When operating in Fan Mode: Off and Fan Mode: Silent, output of the fixture will be reduced and will not reach the same levels as when using other fan modes.

Operation

Virtual Color Wheel

The Ovation Rêve E-3 IP includes a feature called the Virtual Color Wheel (VCW). This feature is available as a standalone control mode for manual use and as a control channel in select DMX personalities. More than 30 premixed colors, custom blended by Chauvet engineers, are available to call up for easier programming.

The DMX values used to mix these colors are provided below. The overall intensity of the Ovation fixture can be adjusted to more closely replicate familiar industry-standard colors. A chart is available at www.chauvetprofessional.com to compare Chauvet's premixed colors with popular gel colors. This chart is for comparison purposes only and is not an assertion that Chauvet's premixed colors match any of the gel colors listed.

Virtual Color Wheel Chart

| DMX Channel Value | Display Readout | Red Value | Green Value | Blue Value | Amber Value | Mint Value |
|-------------------|-----------------------------|-----------|-------------|------------|-------------|------------|
| 000 ⇔ 005 | -- | -- | -- | -- | -- | -- |
| 006 ⇔ 013 | C3050 - Md Yellow | 255 | 225 | 0 | 255 | 37 |
| 014 ⇔ 021 | C3040 - Lt Yellow | 255 | 177 | 3 | 255 | 37 |
| 022 ⇔ 028 | C3240 - Amb Yellow | 255 | 220 | 0 | 255 | 0 |
| 029 ⇔ 035 | C2340 - VLt Amber | 195 | 0 | 15 | 255 | 57 |
| 036 ⇔ 043 | C2040 - Lt Amber | 255 | 0 | 11 | 255 | 61 |
| 044 ⇔ 051 | C2050 - Md Amber | 255 | 53 | 0 | 255 | 17 |
| 052 ⇔ 059 | C2060 - Dk Amber | 255 | 8 | 0 | 255 | 17 |
| 060 ⇔ 067 | C1050 - Lt Red | 255 | 0 | 3 | 14 | 0 |
| 068 ⇔ 075 | C1080 - Md Red | 255 | 0 | 2 | 0 | 0 |
| 076 ⇔ 083 | C1020 - NC Pink | 255 | 75 | 62 | 255 | 73 |
| 084 ⇔ 091 | C1030 - Md Pink | 255 | 75 | 57 | 255 | 41 |
| 092 ⇔ 099 | C1630 - Dk Pink | 218 | 77 | 57 | 255 | 61 |
| 100 ⇔ 107 | C1250 - Md Red Amber | 255 | 0 | 9 | 168 | 0 |
| 108 ⇔ 115 | C1060 - Dk Red Amber | 255 | 5 | 9 | 36 | 0 |
| 116 ⇔ 121 | C1650 - Magenta | 255 | 3 | 62 | 255 | 12 |
| 122 ⇔ 130 | C6170 - Dk Magenta | 255 | 0 | 55 | 0 | 0 |
| 131 ⇔ 138 | C6020 - Lt Lavender | 255 | 220 | 93 | 255 | 44 |
| 139 ⇔ 146 | C5030 - Lt Blue | 0 | 255 | 159 | 112 | 78 |
| 147 ⇔ 154 | C5020 - VLt Blue | 0 | 215 | 145 | 196 | 65 |
| 155 ⇔ 162 | C5430 - Lt Blue2 | 0 | 215 | 132 | 52 | 92 |
| 163 ⇔ 170 | C5070 - Blue | 0 | 195 | 188 | 0 | 19 |
| 171 ⇔ 178 | C5050 - Md Blue | 0 | 163 | 190 | 0 | 68 |
| 179 ⇔ 186 | C5060 - Dk Blue | 0 | 128 | 193 | 0 | 38 |
| 187 ⇔ 194 | C5690 - Indigo | 53 | 9 | 255 | 0 | 0 |
| 195 ⇔ 202 | C5080 - Vdk Blue | 7 | 84 | 116 | 0 | 0 |
| 203 ⇔ 210 | C5081 - Vdk Blue2 | 11 | 82 | 139 | 0 | 0 |
| 211 ⇔ 218 | C4370 - Yel Green | 0 | 255 | 2 | 25 | 0 |
| 219 ⇔ 226 | C4070 - Green | 0 | 255 | 9 | 0 | 175 |
| 227 ⇔ 234 | C4550 - Turquoise | 0 | 255 | 87 | 96 | 255 |
| 235 ⇔ 242 | C4560 - Aqua | 0 | 255 | 98 | 44 | 255 |
| 243 ⇔ 250 | C4570 - Blue Green | 0 | 255 | 26 | 8 | 0 |
| 251 ⇔ 255 | -- | -- | -- | -- | -- | -- |



Note: The colors above are simulated renditions of the color output produced compared with other similar incandescent products. Chauvet makes no guarantee of the color output accuracy.

Color Temperature Chart

| Color Temperature | Red Value | Green Value | Blue Value | Amber Value | Mint Value |
|-------------------|-----------|-------------|------------|-------------|------------|
| 2800K | 253 | 0 | 25 | 255 | 145 |
| 2900K | 253 | 3 | 28 | 255 | 153 |
| 3000K | 251 | 5 | 33 | 255 | 161 |
| 3100K | 248 | 7 | 36 | 255 | 169 |
| 3200K | 245 | 9 | 45 | 255 | 173 |
| 3300K | 242 | 13 | 47 | 255 | 182 |
| 3400K | 237 | 22 | 53 | 255 | 185 |
| 3500K | 230 | 30 | 58 | 255 | 185 |
| 3600K | 225 | 40 | 64 | 255 | 185 |
| 3700K | 221 | 48 | 70 | 255 | 185 |
| 3800K | 220 | 48 | 74 | 255 | 197 |
| 3900K | 220 | 50 | 79 | 255 | 203 |
| 4000K | 210 | 58 | 84 | 255 | 203 |
| 4100K | 205 | 63 | 88 | 255 | 203 |
| 4200K | 199 | 68 | 95 | 255 | 204 |
| 4300K | 189 | 69 | 98 | 255 | 204 |
| 4400K | 183 | 71 | 103 | 255 | 204 |
| 4500K | 174 | 78 | 107 | 255 | 204 |
| 4600K | 170 | 80 | 112 | 255 | 204 |
| 4700K | 166 | 89 | 119 | 255 | 204 |
| 4800K | 164 | 98 | 123 | 255 | 203 |
| 4900K | 163 | 100 | 129 | 255 | 205 |
| 5000K | 163 | 103 | 137 | 255 | 206 |
| 5100K | 163 | 108 | 142 | 255 | 208 |
| 5200K | 163 | 116 | 147 | 255 | 208 |
| 5300K | 163 | 118 | 156 | 255 | 210 |
| 5400K | 162 | 122 | 162 | 255 | 216 |
| 5500K | 162 | 124 | 166 | 255 | 224 |
| 5600K | 162 | 127 | 172 | 255 | 229 |
| 5700K | 159 | 127 | 177 | 255 | 231 |
| 6000K | 158 | 134 | 192 | 241 | 231 |
| 6500K | 152 | 152 | 206 | 225 | 231 |
| 7000K | 144 | 157 | 224 | 218 | 231 |
| 7500K | 127 | 172 | 238 | 218 | 231 |
| 8000K | 122 | 175 | 255 | 200 | 231 |



Note: The color temperatures above are simulated renditions of the color output produced compared with a tungsten lamp at the specified color temperature. Chauvet makes no guarantee of the color output accuracy.

Color Temperature DMX Chart

| DMX Channel | Color Temperature | DMX Channel | Color Temperature | DMX Channel | Color Temperature |
|-------------|-------------------|-------------|-------------------|-------------|-------------------|
| 000 ⇔ 005 | No function | 083 ⇔ 090 | 3900–4000K | 167 ⇔ 174 | 5100–5200K |
| 006 ⇔ 013 | 2800–2900K | 090 ⇔ 097 | 4000–4100K | 174 ⇔ 181 | 5200–5300K |
| 013 ⇔ 020 | 2900–3000K | 097 ⇔ 104 | 4100–4200K | 181 ⇔ 188 | 5300–5400K |
| 020 ⇔ 027 | 3000–3100K | 104 ⇔ 111 | 4200–4300K | 188 ⇔ 195 | 5400–5500K |
| 027 ⇔ 034 | 3100–3200K | 111 ⇔ 118 | 4300–4400K | 195 ⇔ 202 | 5500–5600K |
| 034 ⇔ 041 | 3200–3300K | 118 ⇔ 125 | 4400–4500K | 202 ⇔ 209 | 5600–5700K |
| 041 ⇔ 048 | 3300–3400K | 125 ⇔ 132 | 4500–4600K | 209 ⇔ 216 | 5700–6000K |
| 048 ⇔ 055 | 3400–3500K | 132 ⇔ 139 | 4600–4700K | 216 ⇔ 223 | 6000–6500K |
| 055 ⇔ 062 | 3500–3600K | 139 ⇔ 146 | 4700–4800K | 223 ⇔ 230 | 6500–7000K |
| 062 ⇔ 069 | 3600–3700K | 146 ⇔ 153 | 4800–4900K | 230 ⇔ 237 | 7000–7500K |
| 069 ⇔ 076 | 3700–3800K | 153 ⇔ 160 | 4900–5000K | 237 ⇔ 244 | 7500–8000K |
| 076 ⇔ 083 | 3800–3900K | 160 ⇔ 167 | 5000–5100K | 244 ⇔ 255 | 8000K |

DMX Values

18Ch / 14Ch1 / 14Ch2 / 12Ch

| 12Ch | 14Ch1 | 14Ch2 | 18Ch | Function | Value | Percent/Setting |
|------|-------|-------|------|--|--|--|
| 1 | 1 | 1 | 1 | Dimmer | 000 ⇄ 255 | 0–100% |
| 2 | – | 2 | 2 | Dimmer fine | 000 ⇄ 255 | 0–100% |
| 3 | 2 | 3 | 3 | Red | 000 ⇄ 255 | 0–100% |
| | – | 4 | 4 | Red fine | 000 ⇄ 255 | 0–100% |
| 4 | 3 | 5 | 5 | Green | 000 ⇄ 255 | 0–100% |
| | – | 6 | 6 | Green fine | 000 ⇄ 255 | 0–100% |
| 5 | 4 | 7 | 7 | Blue | 000 ⇄ 255 | 0–100% |
| | – | 8 | 8 | Blue fine | 000 ⇄ 255 | 0–100% |
| 6 | 5 | 9 | 9 | Amber | 000 ⇄ 255 | 0–100% |
| | – | 10 | 10 | Amber fine | 000 ⇄ 255 | 0–100% |
| 7 | 6 | 11 | 11 | Mint | 000 ⇄ 255 | 0–100% |
| | – | 12 | 12 | Mint fine | 000 ⇄ 255 | 0–100% |
| 8 | 7 | 13 | 13 | Strobe | 000 ⇄ 010 011 ⇄ 255 | No function Strobe, slow to fast |
| 9 | 8 | – | 14 | Virtual color wheel | 000 ⇄ 255 | Refer to Virtual Color Wheel Chart |
| 10 | 9 | – | 15 | Color temperature | 000 ⇄ 255 | Refer to Color Temperature DMX Chart |
| 11 | 10 | – | 16 | Hue | 000 ⇄ 000 001 ⇄ 255 | 0 –25–25 |
| – | 11 | – | – | Auto programs | 000 ⇄ 010 011 ⇄ 060 061 ⇄ 110 111 ⇄ 160 161 ⇄ 210 211 ⇄ 255 | No function Auto program 1 Auto program 2 Auto program 3 Auto program 4 Auto program 5 |
| – | 12 | – | – | Auto speed | 000 ⇄ 255 | Auto speed, slow to fast |
| – | 13 | – | 17 | Control (hold for 3 seconds) | 000 ⇄ 007 008 ⇄ 015 016 ⇄ 023 024 ⇄ 031 032 ⇄ 039 040 ⇄ 047 048 ⇄ 055 056 ⇄ 063 064 ⇄ 071 072 ⇄ 079 080 ⇄ 087 088 ⇄ 095 096 ⇄ 103 104 ⇄ 111 112 ⇄ 119 120 ⇄ 127 128 ⇄ 135 136 ⇄ 143 144 ⇄ 151 152 ⇄ 159 160 ⇄ 167 168 ⇄ 255 | No function Dimmer reset Red shift on Red shift off S-curve dimmer Linear dimmer Square dimmer curve Inverse square dimmer curve Dimmer speed mode: OFF Dimmer speed 1 (fastest) Dimmer speed 2 Dimmer speed 3 (slowest) Fan auto Fan on Fan off Fan silent X-Fade Speed: OFF X-Fade Speed: 1 (fastest) X-Fade Speed: 2 X-Fade Speed: 3 X-Fade Speed: 4 (slowest) Reserved for future use |
| 12 | 14 | 14 | 18 | Gobo rotator | 000 ⇄ 127 128 ⇄ 190 191 ⇄ 192 193 ⇄ 255 | Index Clockwise rotation, fast to slow Stop Counterclockwise rotation, slow to fast |

8Ch / 6Ch / 5Ch / 1Ch

| 1Ch | 5Ch | 6Ch | 8Ch | Function | Value | Percent/Setting |
|-----|-----|-----|-----|----------------------------|--|--|
| 1 | 1 | – | 1 | Dimmer | 000 ⇔ 255 | 0–100% |
| – | – | 1 | 2 | Red | 000 ⇔ 255 | 0–100% |
| – | – | 2 | 3 | Green | 000 ⇔ 255 | 0–100% |
| – | – | 3 | 4 | Blue | 000 ⇔ 255 | 0–100% |
| – | – | 4 | 5 | Amber | 000 ⇔ 255 | 0–100% |
| – | – | 5 | 6 | Mint | 000 ⇔ 255 | 0–100% |
| – | – | – | 7 | Strobe | 000 ⇔ 010 011 ⇔ 255 | No function Strobe, slow to fast |
| – | 2 | – | – | Virtual color wheel | 000 ⇔ 255 | Refer to Virtual Color Wheel Chart |
| – | 3 | – | – | Color temperature | 000 ⇔ 255 | Refer to Color Temperature DMX Chart |
| – | 4 | – | – | Hue | 000 ⇔ 000 001 ⇔ 255 | 0 -25–25 |
| – | 5 | 6 | 8 | Gobo rotator | 000 ⇔ 127 128 ⇔ 190 191 ⇔ 192 193 ⇔ 255 | Index Clockwise rotation, fast to slow Stop Counterclockwise rotation, slow to fast |

HSV

| Channel | Function | Value | Percent/Setting |
|---------|---------------------|--|--|
| 1 | Hue | 000 ⇔ 255 | 0–100% |
| 2 | Saturation | 000 ⇔ 255 | 0–100% |
| 3 | Value | 000 ⇔ 255 | 0–100% |
| 4 | Gobo rotator | 000 ⇔ 127 128 ⇔ 190 191 ⇔ 192 193 ⇔ 255 | Index Clockwise rotation, fast to slow Stop Counterclockwise rotation, slow to fast |

Operation

Standalone Configuration

Use standalone configuration to operate the product without a DMX controller.

Virtual Color Wheel

1. Go to the **Virtual Color Wheel** main level.
2. Select **Virtual Color Wheel**.
3. Select the desired gel color (see [Virtual Color Wheel Chart](#)).
4. Select the desired output level (**000–255**).

Color Temperature

To select a color temperature, do the following:

1. Go to the **Virtual Color Wheel** main level.
2. Select **Color Temperature**.
3. Select the desired color temperature (see [Color Temperature Chart](#)).
4. Select the desired output level (**000–255**).

Manual Color Mixer

To do color mixing without a DMX controller, follow the instructions below:

1. Go to the **Virtual Color Wheel** main level.
2. Select **Manual Color Mixer**.
3. Select the color to edit (**Red, Green, Blue, Amber, or Mint**).
4. Select the desired output level for that color (**000–255**).
5. Repeat steps 3 and 4 until product outputs as desired.

Color X-Fade Speed

To create fade transition between colors when using colors in the Virtual Color Wheel or Color Temperature Chart, do the following:

1. Go to the **Virtual Color Wheel** main level.
2. Select **Color X-Fade Speed**.
3. Select **X-Fade Speed 1-4** (from fast to slow), or **Off** (to turn off the fade transition between colors).

Auto Programs

Auto programs allow for dynamic RGBAL color mixing without a DMX controller.

1. Go to **Auto Show** main level.
2. Select the desired auto program (**Auto 1–5**).
3. Select the desired speed (**1–100**).

Red Shift

The Red Shift function causes the amber LEDs to imitate the appearance of a halogen lamp when dimming. To adjust the Red Shift function, do the following:

1. Go to the **Red Shift** main level.
2. Select **On** or **Off**.

Master/Slave

The Master/Slave mode allows a group of Ovation Rêve E-3 IP products (the slaves) to simultaneously duplicate the output of another Ovation Rêve E-3 IP (the master) without a DMX controller.

To set each of the slaves:

1. Go to the **Master/Slave** main level
2. Select **Slave**.

To set the master:

1. Go to the **Master/Slave** main level
2. Select **Master**.
3. Select a static setting.



- **The master is the one that runs a program whether in Auto or Static mode.**
- **Do not connect a DMX controller to the products configured for Master/Slave operation. The DMX controller may interfere with signals from the master.**
- **The master should be the first product in the daisy chain.**

Dimmer Curve

To set the dimmer curve, follow the instructions below:

1. Go to the **Dimmer Curve** main level.
2. Select the desired option (**SCurve**, **Linear**, **Square**, or **Inverse Square**).

Dimmer Profiles

This setting determines how fast the output of the Ovation Rêve E-3 IP changes when the output value is modified. It provides four different options to simulate the dimming curve of an incandescent lighting product.

To select a specific dimmer profile, do the following:

1. Go to the **Dimmer Mode** main level.
2. Select a dimmer curve (**Off**, **Dimmer 1**, **Dimmer 2**, or **Dimmer 3**).



Off: The output is proportional (linear) to the dimmer channel value.
Dimmer 1-3: The output follows the dimmer value based on the corresponding dimmer curve, **Dimmer 1** being the fastest.



For optimum control of the 16-bit dimming channels in the 12Ch, 14Ch2, and 18Ch personalities, ensure that the dimming curves in Dimmer Mode are set to Off.

Color Calibration

This setting determines the maximum output values for each color, which affects the appearance of a full output white.

1. Go to the **Color Calibration** main level.
2. Select **Off** (deactivates color calibration), **User Calibration**, or **Factory Calibration** (the product will use a default white setting).
3. For **User Calibration** mode, select the color value to edit (**Red**, **Green**, **Blue**, **Amber**, or **Mint**).
4. Set the maximum value for the selected color (**125–255**).
5. Repeat steps 3 and 4 until the product outputs as desired.

LED Frequency

This option changes the Pulse Width Modulation (PWM) frequency of the LEDs on the Ovation Rêve E-3 IP. To do so, follow the instructions below:

1. Go to the **LED Frequency** main level.
2. Select PWM Frequency (**600Hz**, **1200Hz**, **2000Hz**, **4000Hz**, **6000Hz**, or **25Khz**).

Fan Mode

This setting determines how the fan speed on the Ovation Rêve E-3 IP is set.

1. Go to the **Fan Mode** main level
2. Select **Auto** (fan speed will increase or decrease based on product temperature), **Off** (fan will stay off. Product output will decrease based on product temperature), **Silent** (fan will maintain a constant silent speed), or **On** (fan speed will always be at maximum).



NOTICE: When operating in Fan Mode: Off, the output of the fixture will be reduced and will not reach the same levels as when using other fan modes.



WARNING: When operating in Fan Mode: Off, the fixture will become hotter to the touch than when using other fan modes. Use proper protective equipment to prevent burns. Keep a safe distance from flammable objects.

Back Light

This setting allows for selection of the amount of time the backlight on the Ovation Rêve E-3 IP's display stays on after the last button is pressed on the control panel.

1. Go to the **Back Light** main level.
2. Select **10S** (10 seconds), **30S** (30 seconds), **2Min** (2 minutes), or **Always On** (remains on).

Key Lock

This setting enables users to activate or disable the control panel lock, which keeps non-authorized personnel from changing the product's settings.

1. Go to the **Key Lock** main level.
2. Select **On** or **Off**.

System Information

This option displays the total number of hours the product has run, the installed software version, and the product's UID.

1. Go to the **Information** main level.
2. Select **Fixture Hours**, **LED Hours**, **Version**, or **UID**.

Operation

Error Codes

See the table below for error codes and recommended solutions:

| Error Code | Possible Reason | Potential Solution |
|------------------------------------|--|--|
| Temperature shows -40°C | The thermistor is not welded properly | Replace the board or weld the thermistor |
| | The temperature wire is not connected or has poor connection | Check the wire connection |
| Temperature shows 125°C | The thermistor is not welded properly | Replace the board or weld the thermistor |
| | The temperature control connector short circuited | Check the temperature control wire connector |
| No such file! | USB has poor connection | Replug the USB |
| | USB internal wires have poor connection | Change the USB |
| | No upgrade file in the USB | Check the files in the USB |
| Model error! | Error reading the file content | Check if the file content is correct |

5. Technical Information

Product Maintenance

To maintain optimum performance and minimize wear, clean this product frequently. Usage and environment are contributing factors in determining the cleaning frequency.

Clean this product at least twice a month. Dust build-up reduces light output performance and can cause overheating. This can lead to reduced light source life and increased mechanical wear.

To clean the product:

1. Unplug the product from power.
2. Wait until the product is at room temperature.
3. Use a vacuum (or dry compressed air) and a soft brush to remove dust collected on the external vents.
4. Clean all transparent surfaces with a mild soap solution, ammonia-free glass cleaner, or isopropyl alcohol.
5. Apply the solution directly to a soft, lint-free cotton cloth or a lens-cleaning tissue.
6. Softly drag any dirt or grime to the outside of the transparent surface.
7. Gently polish the transparent surfaces until they are free of haze and lint.



Always dry the transparent surfaces carefully after cleaning them.

Torque Measurements

To maintain the IP rating when reassembling the product, use the given torque measurements for each of the following screws and bolts:

| Fixture Parts | Torque Rating (Kgf.cm) | Torque Rating (lgb.in) |
|--------------------------------|------------------------|------------------------|
| Power, USB, and DMX Connectors | 10 | 8.7 |
| Covers & Display Press Plate | 18 | 15.62 |

Vacuum Test Measurements

Use the IP Tester from Chauvet Professional to ensure the product has been reassembled correctly by following the information below:

| Parameters | Values |
|--------------------------|------------|
| Method | Positive |
| Test pressure | 40 kPa |
| Test duration | 30 seconds |
| PASS state leak pressure | <0.05 kPa |

6. Technical Specifications

Dimensions and Weight

| | Length | Width | Height | Weight |
|---|--------------------|-------------------|-------------------|--------------------|
| Fixture only | 20.84 in (529 mm) | 12.72 in (323 mm) | 19.75 in (502 mm) | 20.6 lb (9.34 kg) |
| w/ 5° lens extended, yoke up | 42.25 in (1073 mm) | 14.50 in (368 mm) | 19.75 in (502 mm) | 25.2 lb (11.43 kg) |
| w/ 10° lens extended, yoke up | 33.50 in (851 mm) | 12.71 in (323 mm) | 19.75 in (502 mm) | 23.8 lb (10.79 kg) |
| w/ 14° lens extended, yoke up | 30.25 in (768 mm) | 12.71 in (323 mm) | 19.75 in (502 mm) | 26 lb (11.79 kg) |
| w/ 19°, 26°, 36°, or 50° lens extended, yoke up | 27.50 in (698 mm) | 12.71 in (323 mm) | 19.75 in (502 mm) | 24.4 lb (11.06 kg) |
| w/ 15°–30° lens, yoke up | 33.75 in (857 mm) | 12.71 in (323 mm) | 19.75 in (502 mm) | 30.2 lb (13.69 kg) |
| w/ 25°–50° lens, yoke up | 26.50 in (673 mm) | 12.71 in (323 mm) | 19.75 in (502 mm) | 26.8 lb (12.15 kg) |

Power

| Power Supply Type | Range | Voltage Selection |
|----------------------|--------------------------|-------------------|
| Switching (internal) | 100 to 240 VAC, 50/60 Hz | Auto-ranging |

| Parameter | 100 V, 60 Hz | 120 V, 60 Hz | 208 V, 60 Hz | 230 V, 50 Hz | 240 V, 50 Hz |
|----------------------------------|---------------------|---------------------|---------------------|---------------------|---------------------|
| Consumption | 368 W | 354 W | 345 W | 342 W | 341 W |
| Operating current | 3.67 A | 2.99 A | 1.70 A | 1.56 A | 1.48 A |
| Power-linking current (products) | 13.6 A (3 products) | 13.6 A (4 products) | 13.6 A (7 products) | 13.6 A (7 products) | 13.6 A (8 products) |

| Power I/O | U.S./Canada | Worldwide |
|------------------------|-------------------------|-------------------------|
| Power input connector | Seetronic Powerkon IP65 | Seetronic Powerkon IP65 |
| Power output connector | Seetronic Powerkon IP65 | Seetronic Powerkon IP65 |
| Power cord plug | Edison (U.S.) | Local plug |

Light Source

| Type | Color | Quantity | Power | Current | Lifespan | Color Temperature |
|------|------------|----------|----------|---------|--------------|-------------------|
| LED | Red | 12 | 3.5–10 W | 2.4 A | 50,000 hours | 6333 K |
| | Green | 19 | | | | |
| | Blue | 3 | | | | |
| | Royal blue | 9 | | | | |
| | Amber | 24 | | | | |
| | Mint | 24 | | | | |

Photometrics

| Parameter | 5° | 10° | 14° | 19° | 26° | 36° | 50° | 15°–30° | 25°–50° |
|-------------------------|--------|--------|--------|--------|--------|--------|--------|--------------|---------------|
| Beam angle | 6.7° | 11.1° | 14.2° | 17.6° | 26° | 32.8° | 50° | 14.3° 23.8° | 24.7° 41.1° |
| Field angle | 7.9° | 12.8° | 16.9° | 20.8° | 28.2° | 37° | 54.2° | 17.3° 33.2° | 27.3° 44.7° |
| Illuminance @ 5 m (lux) | 28,740 | 15,108 | 8,823 | 5,377 | 3,300 | 1,977 | 864 | 7,713 2,484 | 1,502 3,174 |
| Lumens | 8,335 | 11,092 | 10,700 | 10,185 | 12,178 | 11,888 | 12,274 | 9,166 11,395 | 11,810 14,328 |

Acoustic

| Parameter | Idle | Auto | On | Off | Silent |
|----------------------------|------------|------------|------------|-----------|------------|
| Sound pressure level @ 1 m | 11.4 dB(A) | 30.3 dB(A) | 36.1 dB(A) | 0.7 dB(A) | 26.5 dB(A) |

Thermal

| Maximum External Temperature | Cooling System |
|------------------------------|-------------------------|
| 113 °F (45 °C) | Fan-assisted convection |

DMX

| I/O Connector | Channel Range |
|---------------|--|
| 5-pin XLR | 1, 5, 6, 8, 12, 14CH1, 14CH2, 18, or HSV |

Ordering

| Product Name | Item Name | Item Code | UPC Number |
|---------------------|-----------------|-----------|--------------|
| Ovation Rêve E-3 IP | OVATIONREVEE3IP | 03121923 | 781462222710 |



Contact Us

| General Information | Technical Support |
|---|--|
| Chauvet World Headquarters | |
| Address: 3360 Davie Rd., Suite 509 Davie, FL 33314 Voice: (954) 577-4455 Fax: (954) 929-5560 Toll Free: (800) 762-1084 | Voice: (844) 393-7575 Fax: (954) 756-8015 Email: chauvetcs@chauvetlighting.com Website: www.chauvetprofessional.com |
| Chauvet U.K. | |
| Address: Pod 1 EVO Park Little Oak Drive, Sherwood Park Nottinghamshire, NG15 0EB UK Voice: +44 (0) 1773 511115 Fax: +44 (0) 1773 511110 | Email: UKtech@chauvetlighting.eu Website: www.chauvetprofessional.eu |
| Chauvet Benelux | |
| Address: Stokstraat 18 9770 Kruishoutem Belgium Voice: +32 9 388 93 97 | Email: BNLtech@chauvetlighting.eu Website: www.chauvetprofessional.eu |
| Chauvet France | |
| Address: 3, Rue Ampère 91380 Chilly-Mazarin France Voice: +33 1 78 85 33 59 | Email: FRtech@chauvetlighting.fr Website: www.chauvetprofessional.eu |
| Chauvet Germany | |
| Address: Bruno-Bürgel-Str. 11 28759 Bremen Germany Voice: +49 421 62 60 20 | Email: DEtech@chauvetlighting.de Website: www.chauvetprofessional.eu |
| Chauvet Mexico | |
| Address: Av. de las Partidas 34 - 3B (Entrance by Calle 2) Zona Industrial Lerma Lerma, Edo. de México, CP 52000 Voice: +52 (728) 690-2010 | Email: servicio@chauvet.com.mx Website: www.chauvetprofessional.mx |

Warranty & Returns

For warranty terms and conditions and return information, please visit our website.

For customers in the United States and Mexico: www.chauvetlighting.com/warranty-registration.

For customers in the United Kingdom, Republic of Ireland, Belgium, the Netherlands, Luxembourg, France, and Germany: www.chauvetlighting.eu/warranty-registration.