

interM
interM
interM
interM
interM
interM
interM
interM
interM
interM

Operation Manual

RC-100 Remote Controller



Unpacking and Installation

Although it is neither complicated to install nor difficult to operate your set, a few minutes of your time is required to read this manual for a properly wired installation and becoming familiar with its many features and how to use them. Please take a great care in unpacking your set and do not discard the carton and other packing materials. They may be needed when moving your set

and are required if it ever becomes necessary to return your set for service.

Contents

Cautions for Handling and Installation	2	Specifications	9
Method to put cell in	3	Service	
Accessory	3	Procedures	10
Function of remote controller button	4	Schematic	10
Method to operate remote controller	7	Parts List	10
When a remote controller does		Warranty	11
not properly operate	8		

Cautions for Handling and Installation


- Don't disassemble the unit. Otherwise, the unit may fail.
- Don't put or soak the unit in water. Otherwise, the unit may fail.
- Don't use other cells than designated. Don't charge them.

In addition, don't mix new cells with old ones for use. Fracture of cells and leak of liquid may result in


- fire, physical injury or contamination of the unit.
- Put cells in the unit as described while taking care of polarity indication(+, - direction).
If putting them in, fracture of cells and leak of liquid may result in fire, physical injury or contamination of the unit.
- Don't heat, disassemble, or put in fire and water. Fracture of cells and leak of liquid may result in fire, physical injury or contamination of the unit.

Method to put cell in

- ① Separate the cover behind a remote controller.
Separate the unit after removing screws behind a remote controller using a L-wrench.
- ② Put cells in.
A 1.5V AAA type of 2 cells is required. Put cells in the unit after checking a (+) or (-) pole.
- ③ Cover the cover.
Tighten screws after covering.

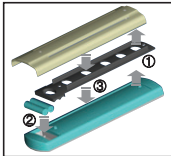

Accessory

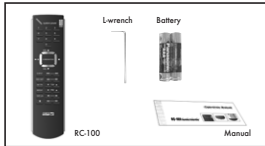


RC-100(REMOTE CONTROLLER) ③

Function of remote controller button

- 1. Power button**
Power ON/OFF the system.
- 2. Function selection switch**
Set switches to match with the type of a system to operate. Applied function is changed depending on setting position.



- 3. Numeric button**
Used when selecting a track of CD and the memorized frequency address of a tuner.
- 4. Adjust output level of the Volume Up/Down button AMP.**
 - VOL▲ /VOL▼ : Put the volume level Up/Down.
- 5. Source Select Button**
Select input source of the AMP.

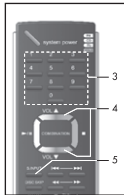

6. CD Function Button

– ▶/|| : Play/Pause


– ■ : Stop

DISC SKIP : Select a disc to play.
(Equivalent to CD Changer)

REPEAT : Select the Play Repeat mode.

– I◀◀-▶▶I : Used when searching the played music forward or backward.

– ◀◀-▶▶ : Used when moving a track forward or backward during play.

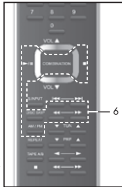

7. TUNER Function Button

- ▼TUNING▲ : Used when searching broadcast frequency.

- ▼PRESET▲ : Used when selecting memorized broadcast frequency.

AM/FM: Used when selecting AM and FM broadcast.



8. DECK Function Button

This button is used when operating the deck mounted on the PA system.

- TAPE A/B : Used when selecting a deck to play.
- ◀ : Play the rear side of a tape (RWD).
- ▶ : Play the front side of a tape (RWD).
- ◀◀ : Rewind
- ▶▶ : Fast wind
- ■ : Stop



Method to operate remote controller

1. Set switches to match with the system to operate the function selection switch.
 - PA : PA system where tuner, CDP or DECK is mounted on.
 - CD : CD player not be produced
 - TU : Tuner not be produced
 - HOLD : Function to hold the whole function which protects the unit from careless manipulation.

- ※ Of our products, only those equipped with the receipt part of a remote controller may be remotely operated and some products may be excluded.
2. Press the relevant button after pointing toward the receipt part of a remote controller of the system. Manipulation distance is about 7m within the left or right angle of 30° .
The longer the using period of a cell, the shorter manipulation distance further becomes lessen.
 3. If not using a remote controller, place the function selection switch on HOLD.

When a remote controller does not properly operate

1. Replace cells of a remote controller with new one if distance significantly becomes more than usual time. If using bad cells, leak of liquid may cause failure of the system.
2. If a fluorescent lamp around the system is 3-waveform, distance of manipulation may be reduced to more than the half. In this case, use it immediately in front of the receipt part of a remote controller of the system.
3. Remove dusts where dusts are severely laid between the transmit part of a remote controller of the system and the receipt part.

Specifications

Carrier Frequency	37.9kHz
Battery	AAA 1.5V 2EA
Operation Temperature	-10° C ~ +40° C
Weight (SET)	280g / 0.6lb
Dimensions (SET)	60(W) X 220(H) X 23(D)mm / 2.4(W) X 8.6(H) X 0.9(D)in

* Specifications and design subject to change without notice.

Service

Procedures

Ensure the problem is not related to operator error, or external system devices, Once it is certain that the problem is related to the product contact your warranty provider as described in the warranty section of this manual.

Schematic

A Schematic is available by contacting your warranty provider.

Parts List

A Parts List is available by contacting your warranty provider.

Warranty

Warranty terms and conditions vary by country and may not be the same for all products. Terms and conditions of warranty for a given product may be determined first by locating the appropriate country which the product was purchased in, then by locating the product type.

To obtain specific warranty information and available service locations contact Inter-M directly or the authorized Inter-M Distributor for your specific country or region.



INTER-M AMERICAS, INC.
13875 ARTESIA BLVD. CERRITOS, CA 90703 USA
TEL : +1-562-921-0313, FAX : +1-562-921-0370
Home Page : <http://www.inter-m.net>, E-mail : info@inter-m.net

INTER-M Corporation
SEOUL OFFICE:653-5 BANGHAK-DONG, DOBONG-KU, SEOUL, KOREA
TEL : +82-2-2289-8140~8, FAX : +82-2-2289-8149
Home Page : <http://www.inter-m.com>, E-mail : overseas@inter-m.com

interM

MADE IN KOREA
www.inter-m.com
2007. 9 9000002820