






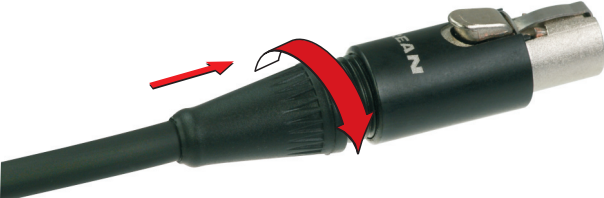



ASSEMBLY INSTRUCTION

TINY xlr | Cable Connector - NT*FC-B & NT*FC-B-W


- (A)**  Slide the rubber sealing (1) (NT*FC-B-W only) and the boot (2) onto the cable.
- (B)**  Prepare cable as shown.
- (C)**  Insert wires into the terminals and solder them.
- (D)**  Apply the grounding to the cable and position it on the insert.
Attention: Pay attention to the key.
- (E)**  Grounding Option: Ground with housing, solder #1 to the solder lug of the grounding.
- (F)**  Put chuck onto the cable.
Attention: Pay attention to the guiding key.
- (G)**  Slide insert and chuck together into the housing.
- (H)**  Screw the bushing onto the connector.
The NT*FC-B type is ready.

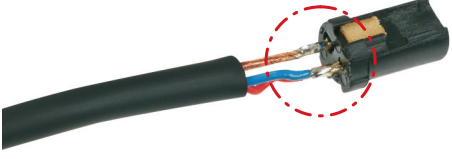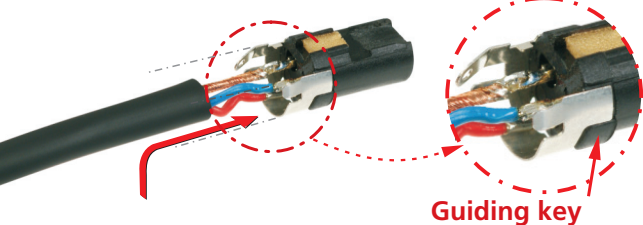Rubber sealing assembly on page 2.

Assembly of rubber sealing (NT*FC-B-W)

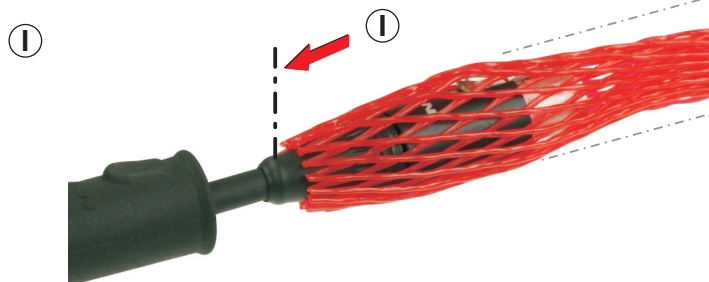

I Put the assembly hose onto the connector over the end of the boot (as shown in picture).

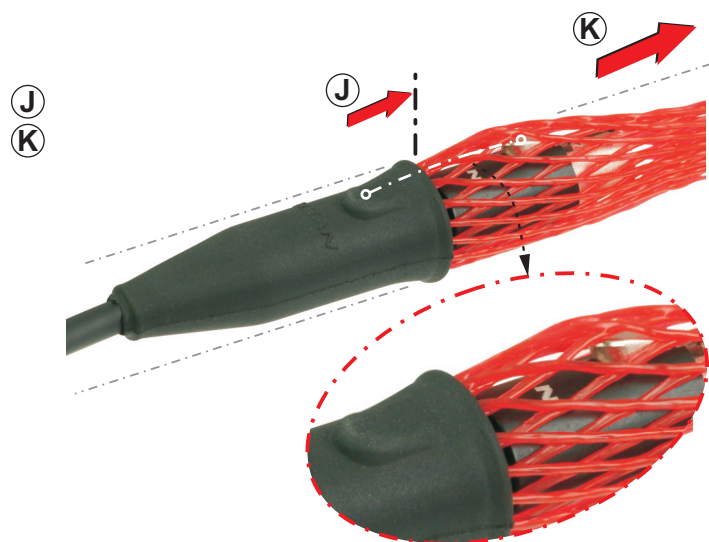

J Push the rubber sealing onto the assembly aid.
Attention: Pay attention to the position of the latch (see the picture).

K Hold the cable and pull the assembly tool jerkily off the connector (the sealing jacket is pulled in position).



► **Finish**